

Step 1: Rivet the F-12122 Artex Elt Bracket to the F-1204F-R Aft Side Bulkhead as shown in Figure 1.

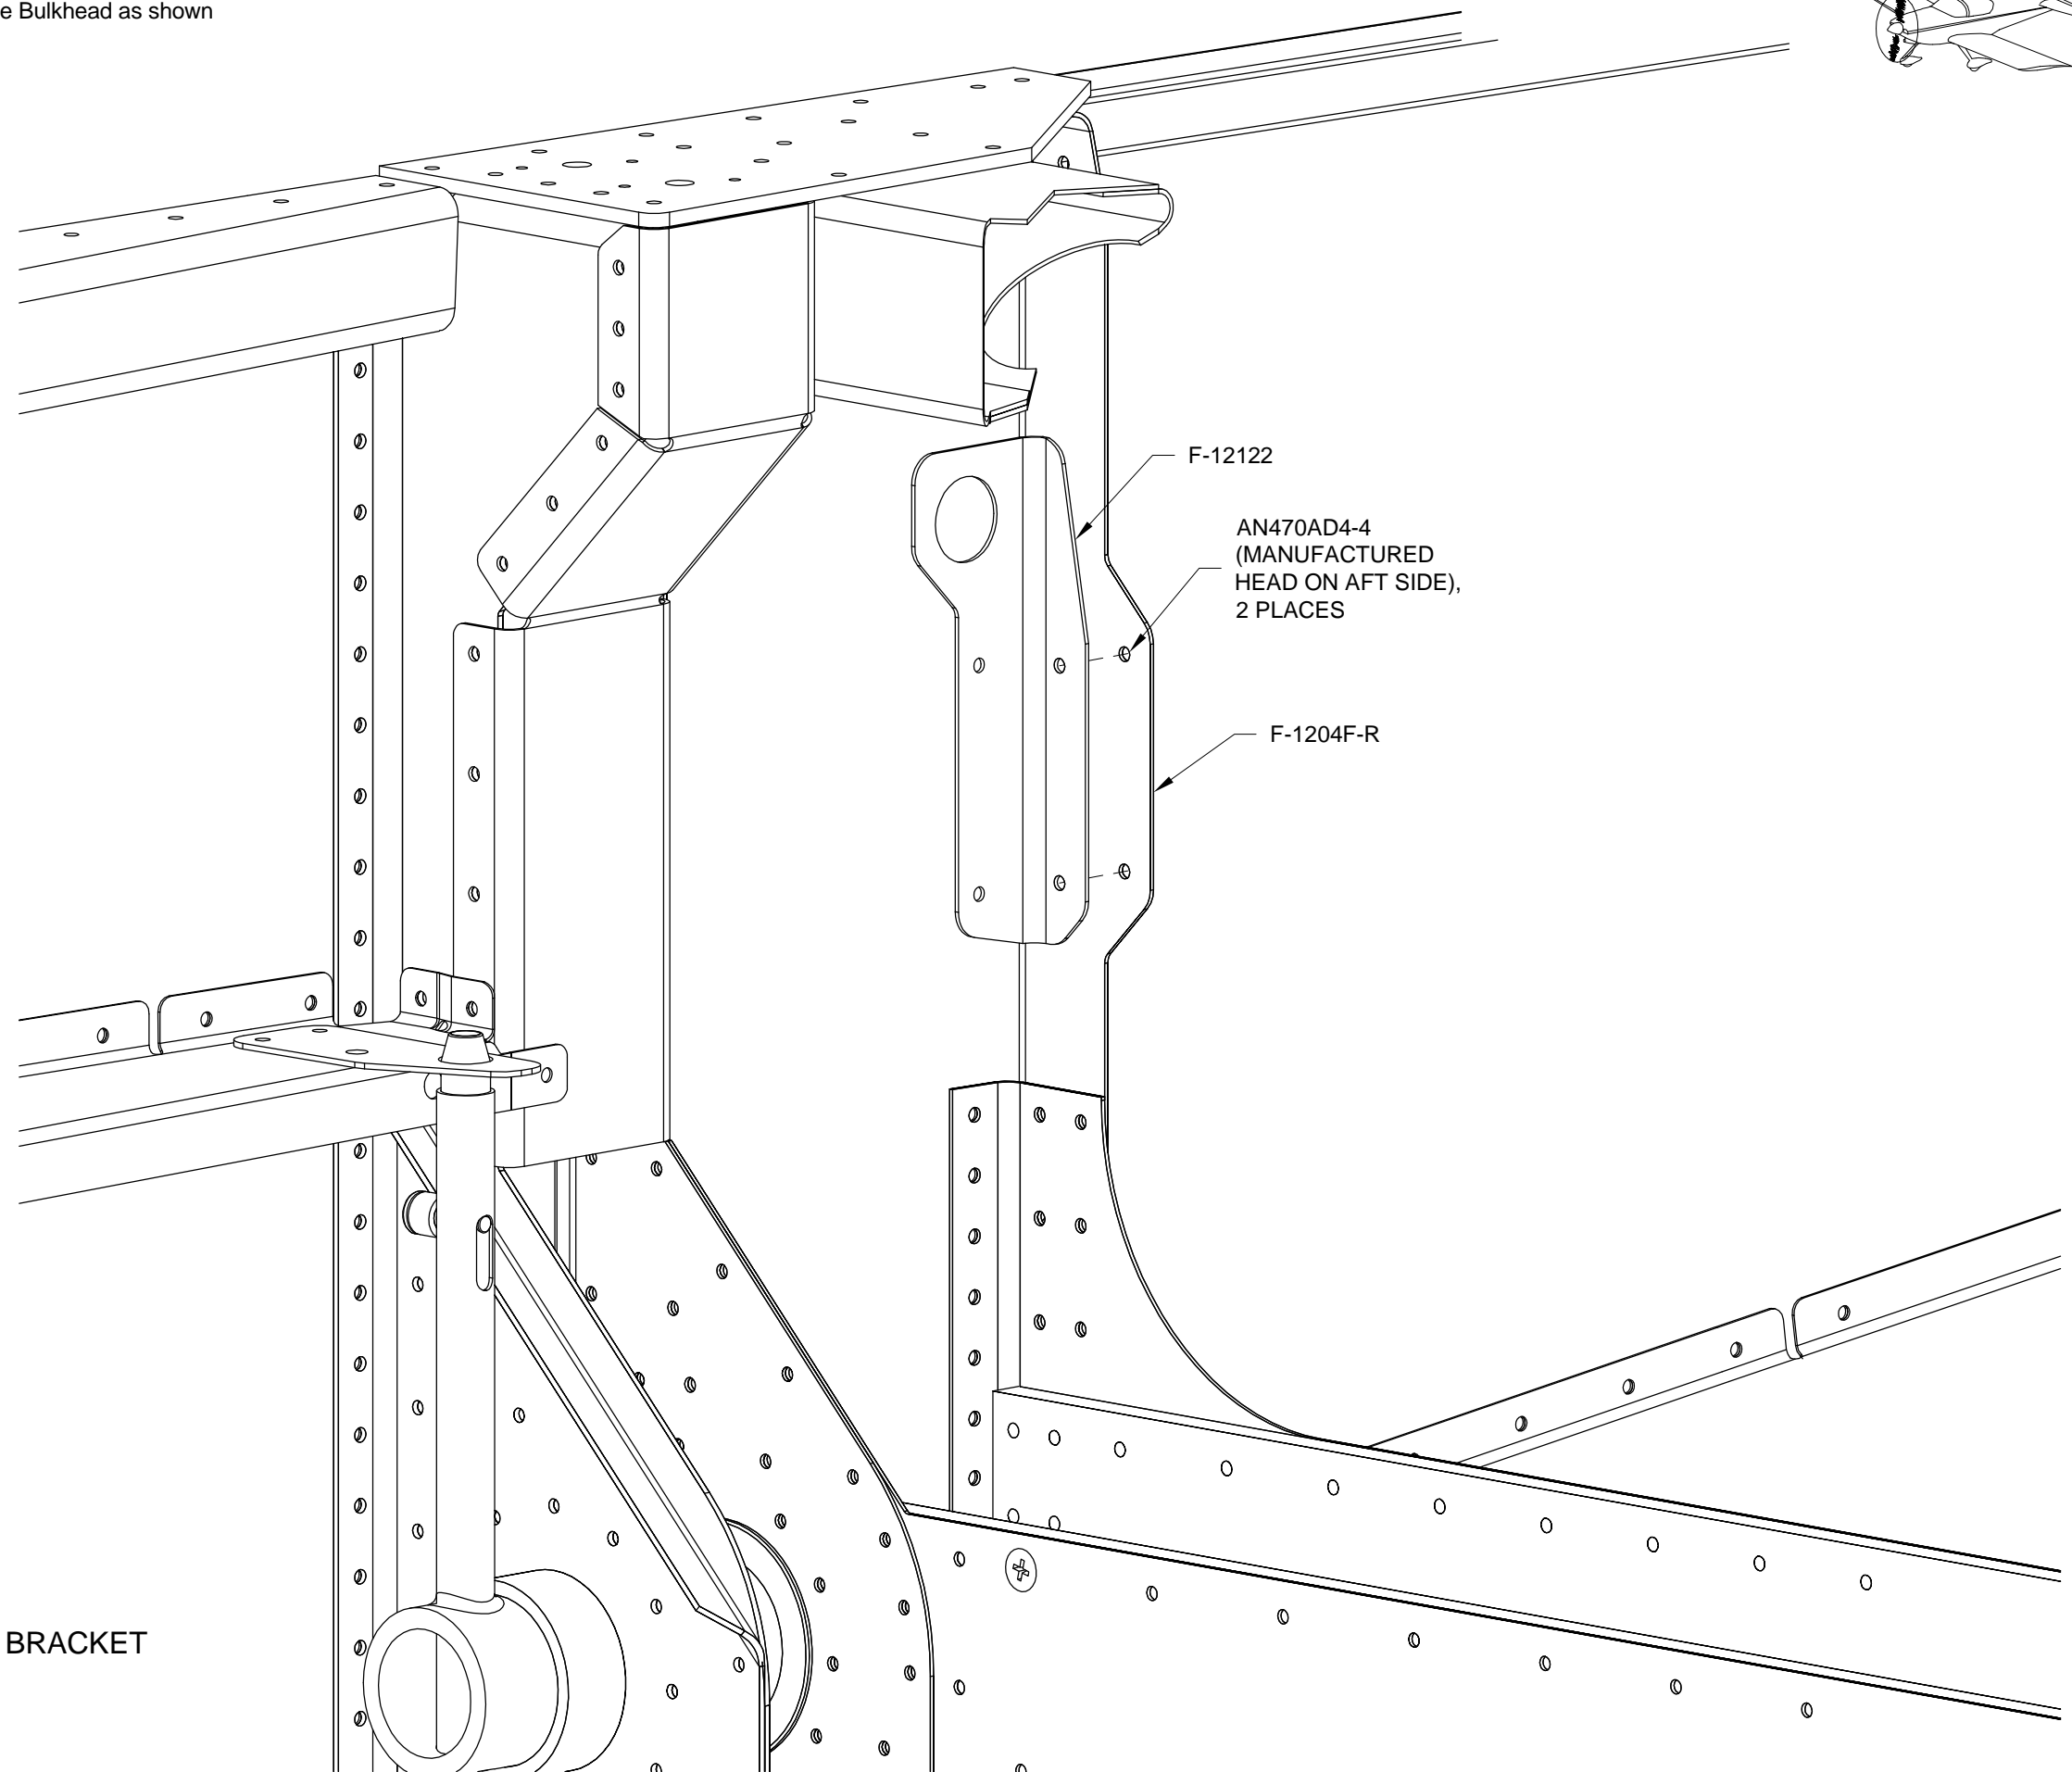


FIGURE 1: INSTALLING THE ELT BRACKET